

Connection of Weight Indicator U137



J2 9p D-sub Load Cell contact

1. + Signal green
2. - Signal yellow
- 3.
4. + Sense pink
5. + Excitation brown
- 6.
- 7.
8. - Sense gray
9. - Excitation white

The shield is connected to the hood of the Dsub

Note!


The colour-code is Unisystem's standard, but it can differ.

J3 9p D-sub RS 232 interface contact

1. Option input
2. RD
3. TD
4. DTR
5. 0VD
- 6.
- 7.
8. CTS
- 9.

For some more information of the contacts, please see page 7 in B01950 Calibration document for U137

Connection of RS232 for Marine Scale with U137 in stainless steel box

Signal	Pin No
RD	2
TD	3
0VD	1
Shield	

Pin numbers from connection side

