

Connection of Weight Indicator U237



J2 9p D-sub Load Cell contact

1. + Signal green
2. - Signal yellow
- 3.
4. + Sense pink
5. + Excitation brown
- 6.
- 7.
8. - Sense gray
9. - Excitation white

The shield is connected to the hood of the Dsub

J3 9p D-sub Power / interface contact


1. Power 0V
2. Power +V
3. 0VD
4. +VB
5. TD
- 6.
7. RD
8. CTS
9. DTR

Note!

The colour-code is Unisystem's standard, but it can differ.

For some more information of the contacts, please see page 7 in B01950 Calibration document for U237.

Connection of RS232 for Marine Scale with U237 in stainless steel box

Signal	Pin No
RD	2
TD	3
0VD	1
Shield	

Pin numbers from connection side

